

DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com



Using the CEVB (Controlled Ethanol Vapour Burning) technology, DecoFlame has created Denver Basic®, a simplified automatic burner available in three dimensions.

Featuring the e-Ribbon Fire™ burning system, Denver Basic® is suitable for various fireplace applications, either as a drop-down burner or integrated in built-in models.

DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com

Download 2D DWG Basic 720

Download 2D DWG Basic 920

Download 2D DWG Basic 1120

Download 3D STEP Basic 720

Download 3D STEP Basic 920

Download 3D STEP Basic 1120

FEATURES

- e-Ribbon™ technology
- Fuel level indicator
- Flame level indicator
- Bluetooth / App and six flame levels
- Safety sensors
- No chimney required
- 2mm Steel baseplate
- Black
- Safety chamber
- One 80mm high glass screen to front

TECHNICAL INFORMATION 720/920/1120

Flame tray size: 500mm/700mm/900mm

Capacity: 4L / 5,8L / 7,2 L

Fuel consumption: 0,2 - 0,55 l/h / 0,3 - 0,8 l/h / 0,35 - 1 l/h

Burning time: 7h - 20h / 7,5 - 20,8 / 7,3h - 20h

Heat output: 1,2 - 3,2 kW / 1,6 - 4,5 kW / 2,1 - 5,7 kW

Net weight: 19,5 kg / 22 kg / 26 kg



Minimum room size: 64m³ / 89m³ / 115m³

Power supply: 220V - 240V - 50 Hz

Finish: Powder-coated Steel or brushed stainless steel and optic-white glass

OPTIONAL




- Additional glass screens
- White baseplate
- Polished/brushed stainless steel, copper or brass baseplate

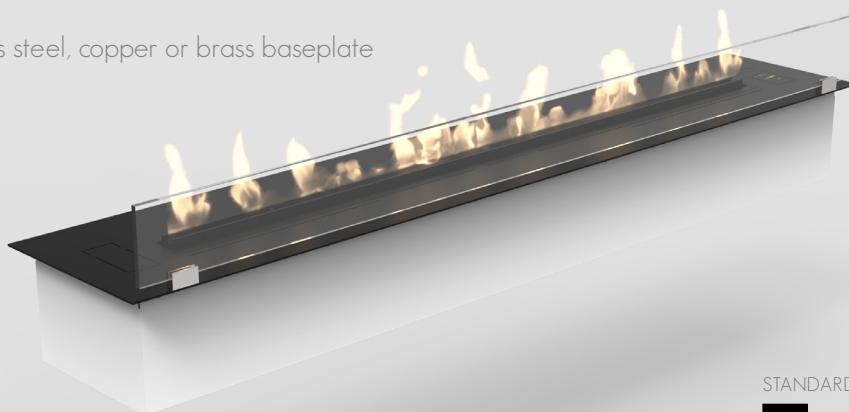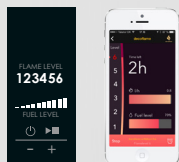

STANDARD FINISHES




OPTIONAL

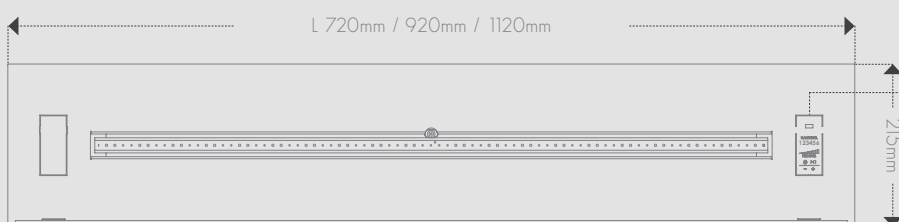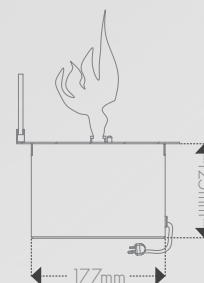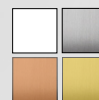

Control Panel

On / Off
Flame level Down

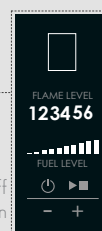

Service USB

Flame level Indicator

Fuel Level Indicator

Start / Stop

Flame level Up

DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com



Step 1: Make sure that the dimensions of the cut-out correspond to the measurements indicated in the technical drawing received with your fireplace.

Step 2: Connect the fireplace to a source of electricity.

Step 3: Recess the fireplace into the wall cut-out according to the indications in the User's manual.

Step 4: Place the glass screen/s on the top plate by fitting the pin holders into the holes.

Step 5: Turn on the fireplace. Fill in the right amount of bioethanol by verifying the level on the indicator.

Step 6: Start the fireplace by pressing the Play/Start button on the control panel.

Enjoy your fire.

DecoFlame Bluetooth Application Installation




App Store



Google play



Model:	Denver Basic 720 - black	CE
Dimensions:	720x215x125mm - Flame Tray 500	
Power Supply:	220/240V - 50Hz must be earthed	
Serial Number:	72000.05.16.V1.001	
Thermal Output:	max 2.9 kW	
Fuel Type:	bioethanol 96%	
Room Volume:	min. 58 m3	
Radio Frequency:	433.92 MHz	
Bluetooth Code:	0001	
Manufacturer:	DecoFlame ApS - Made in Denmark	

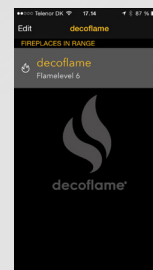


1. Download and install the DecoFlame App by scanning the QR code above corresponding to your smart device's operating system.

2. In order to pair your fireplace with your smart device, start the fireplace by pressing the 'ON' button.


Start the App and choose your fireplace. Insert the code from YOUR rating plate, like the one highlighted above.

3. Once your device is paired, the fireplace should be visible on the app. You are now able to change the name of the fireplace.


Note: You are able to pair more than one fireplace like described in the step nr. 2 and give them different names.

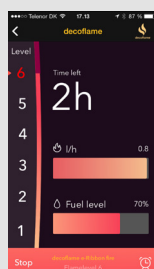

4. Once you have selected your fireplace, you can turn it on by pressing 'START'. If the fireplace has already been turned on using the control panel, you can now monitor the fuel level and the consumption.

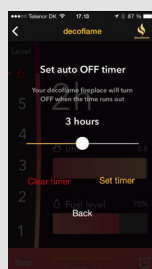

5. For the 'Turn Off Timer' press the clock icon in the lower right corner. To adjust the remaining time, slide the dot to the left and right and select 'SET TIMER'. The remaining burning time can be changed by repeating the above mentioned steps. To cancel the timer select 'CLEAR TIMER'.

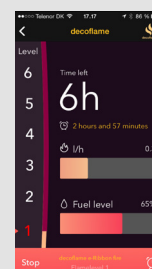


6. For adjusting the flame intensity, select the desired level on the left side of the screen. (1-lowest, 6-highest) Should there not be enough fuel for the selected burning time - the fireplace will shut down automatically. Select 'STOP' to turn off the fireplace.


DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com

Cut-out dimensions

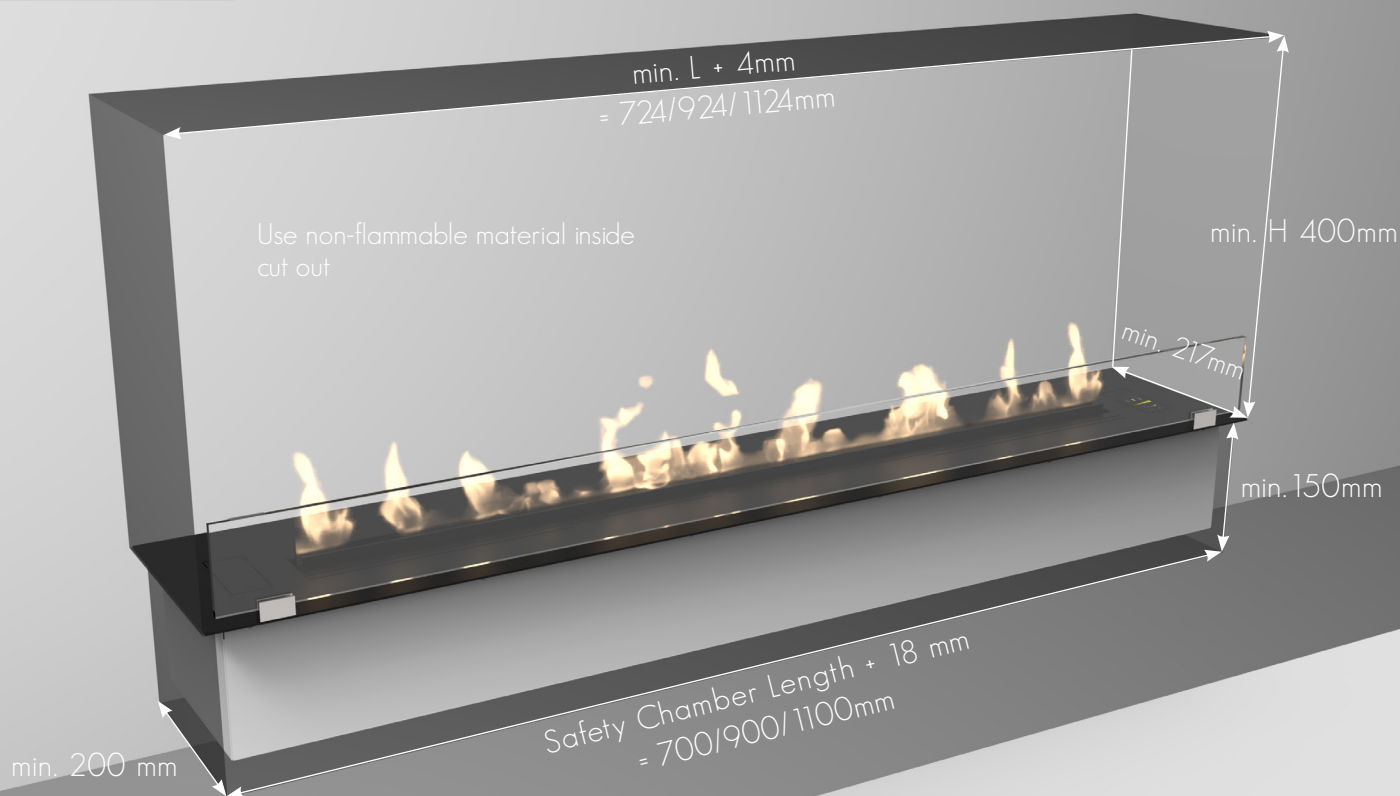

Please Note, if using the minimum required dimensions for the wall cut-out, the wall in front of the safety chamber becomes very thin, only 7,5mm.

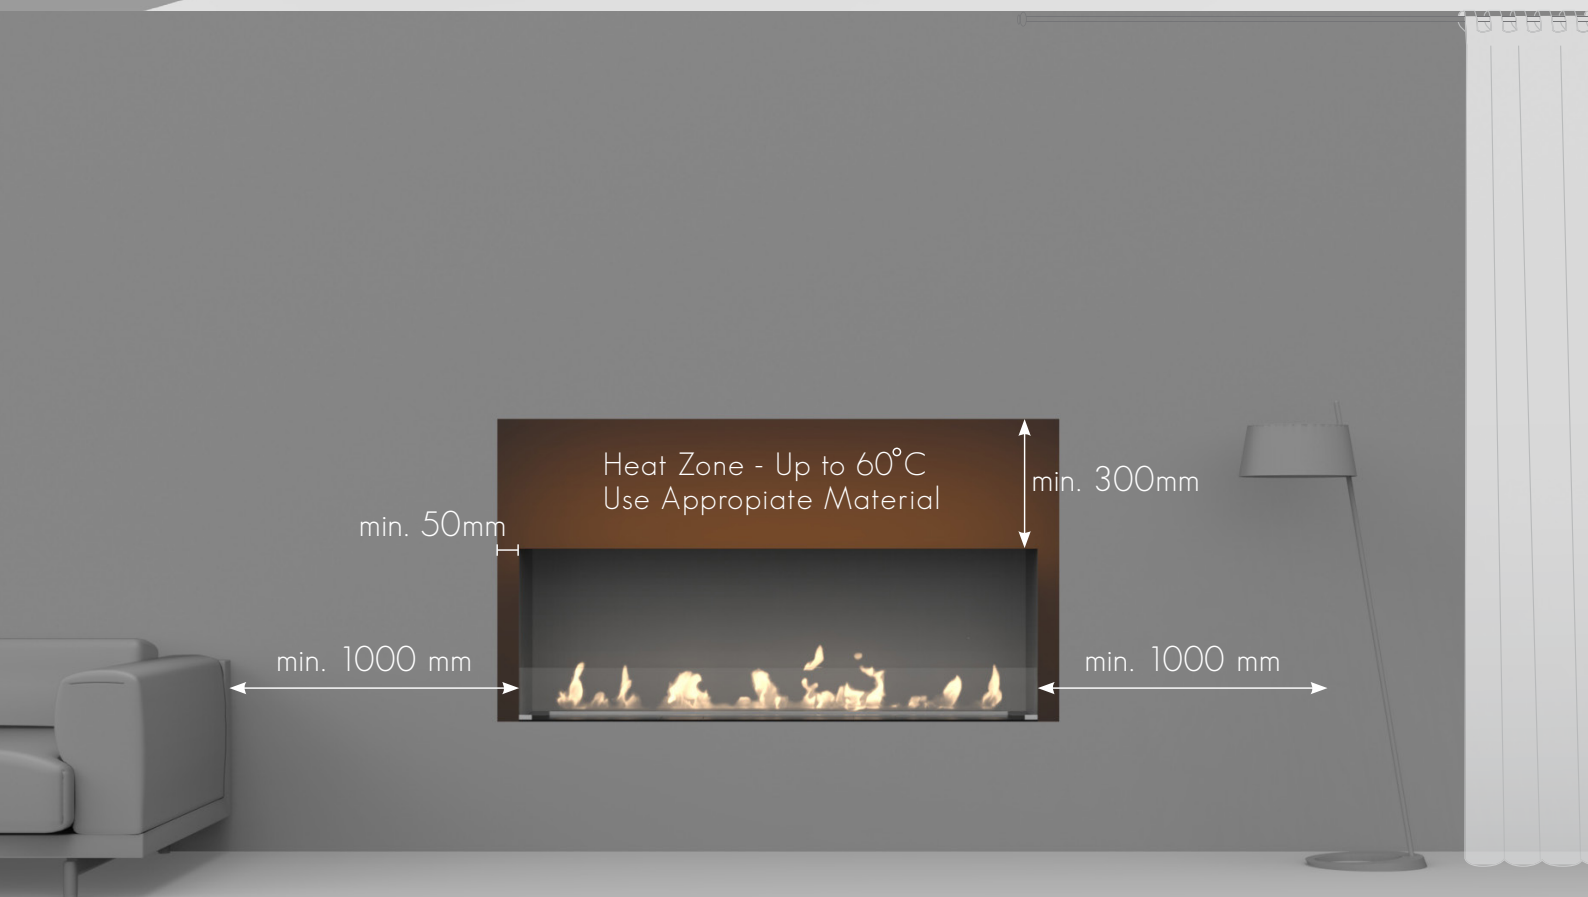


DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com


DecoFlame strongly recommends installing one or more glass shields in order to protect the flame from draught, while keeping it vivid. Please see below the situations where the glass is optional and where it is mandatory.

Optional glass

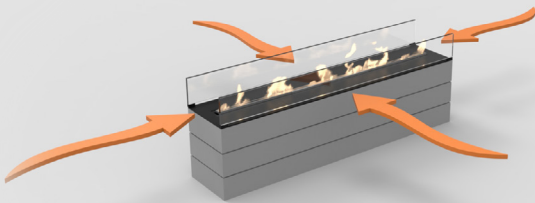


Note: Order additional glass

Mandatory glass

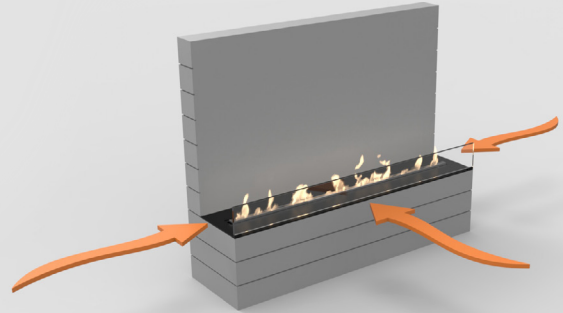


Optional glass

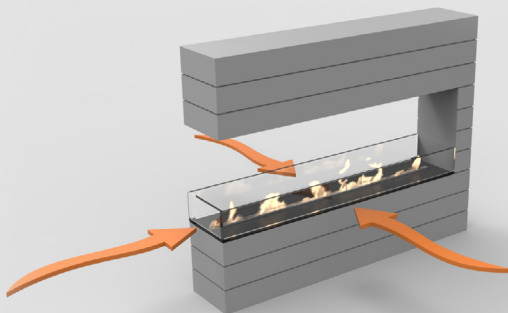


Note: Order additional glass

Mandatory glass

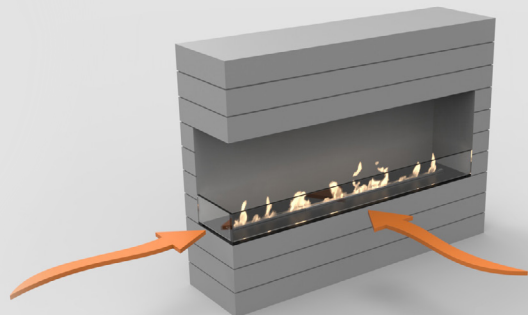


Note: Order additional glass

Optional glass

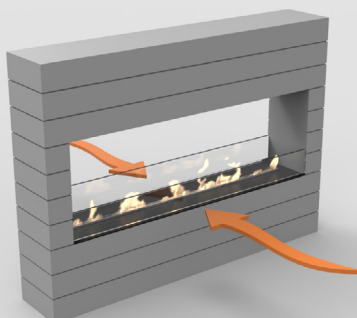

Note: Order additional glass

Mandatory glass

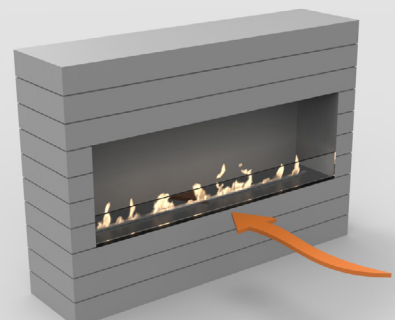

DENVER BASIC™ 720mm / 920mm / 1120mm

www.decoflame.com

It is imperative to follow the indications in the User's manual concerning the installation of decorative or electronic items above the fireplace.

